


ROZPADOVÁ SCHÉMA NÁHRADNÝCH DIELOV

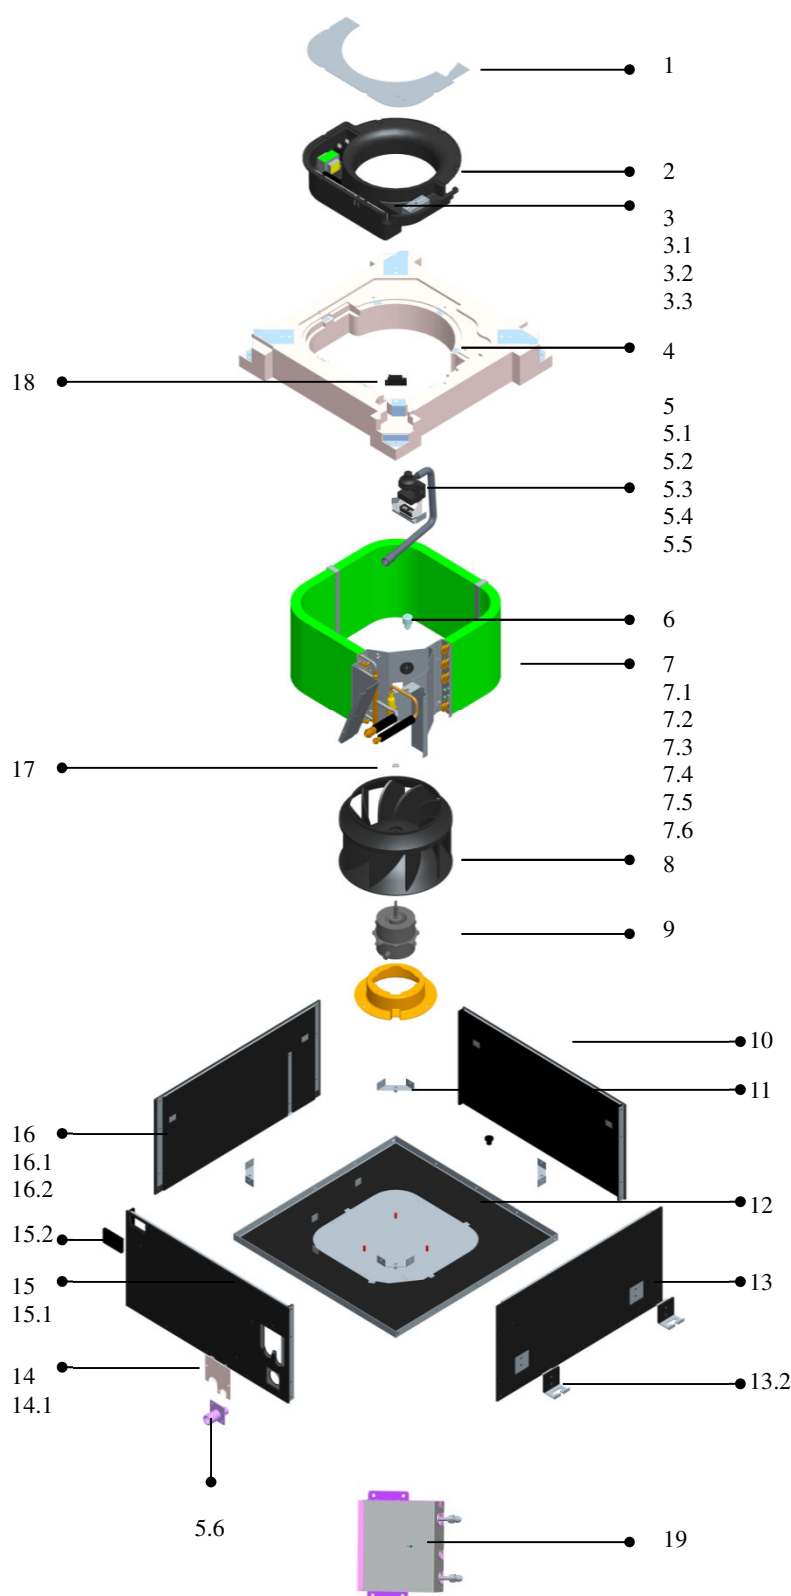

Č.	Názov dielu	Počet
1	Electrical control box cover assembly	1
2	Electrical control box	1
3	Electrical control box assembly	1
3.1	Temperature sensor	1
3.2	Transformer	1
3.3	Terminal	1
4	Foam water pan assembly (ROHS)	1
5	Water pump components	1
5.1	Water pump fixing plate assembly	1
5.2	Discharge pipe	1
5.3	Water pump	1
5.4	Water pump gasket 2	1
5.5	Water pump gasket 1	1
5.6	Discharge joint pipe assembly (ROHS)	1
6	Water level switch	1
7	Evaporator components	1
7.1	End-plate II fixing plate assembly	1
7.2	End-plate I fixing plate assembly	1
7.3	Inclined end-plate assembly	1
7.4	Evaporator compacting bar assembly	2
7.5	Evaporator subassembly	1
7.6	Centrifugal fan	1
8	Indoor fan motor	1
9	Brattice IV components	1
10	Brattice IV	1
10.1	Brattice IV	1
11	Brattice fixing bar components	4
12	Chassis components	1
12.1	Chassis welding components	1
13	Brattice I components	1
13.1	Brattice I	1
13.2	Shackle	2
14	Copper tube support panel components	1
14.1	Copper tube support panel	1
15	Brattice II components	1
15.1	Brattice II	1
15.2	Protection rubber	1
16	Brattice III components	1
16.1	Brattice I	1
16.2	Shackle	2
17	Fan gasket	1
18	Groove clamp assembly	1
19	The EXV subassembly	1